

Parts Book Update Instructions for AlarmCAD Professional and AlarmCAD Classic Standalone above v4.2.39 and AC4AC above v1.11.33

AlarmCAD Notifier Professional and **AlarmCAD Notifier Professional Lite** users should follow this example.

The default settings are shown here and the **“Include distributed (Manufacturer) parts”** option should ALWAYS be checked.

Do Not uncheck the “Include distributed (Manufacturer) parts” for a Notifier Update using QParts.mdb.

AlarmCAD Professional and **AlarmCAD Professional Lite** users should follow this example.

The default settings are shown here and the **“Include distributed (Manufacturer) parts”** option should ALWAYS be checked *unless you are updating a Legacy database. (See Classic below)*



If you use a Non-Distributed database i.e. EST.mdb, Update__.mdb, Your.mdb These are Legacy Databases and use these Classic Database Update Settings

AlarmCAD Classic and **AlarmCAD Classic Lite** users should follow this example.

“Include distributed (Manufacturer) parts” option should ALWAYS be **UNCHECKED**.

**Updating a Legacy database can cause unpredictable results when you include the distributed (Manufacturer) parts as part of the update. This feature should always be unchecked when performed. A Legacy database updated with Manufacturer parts is not supported.*

Professional Series of AlarmCAD Parts Book Update Settings for the Distributed Database **AAParts.mdb** or **QParts.mdb**.

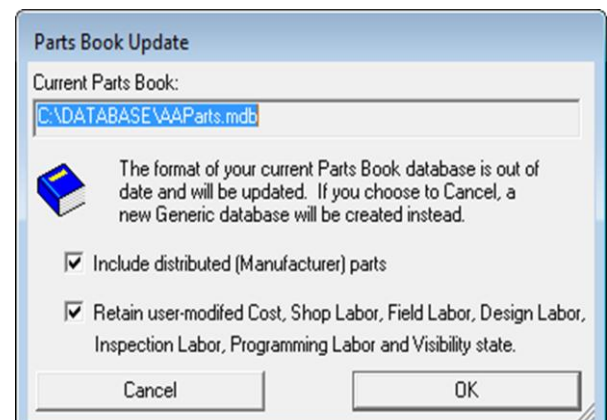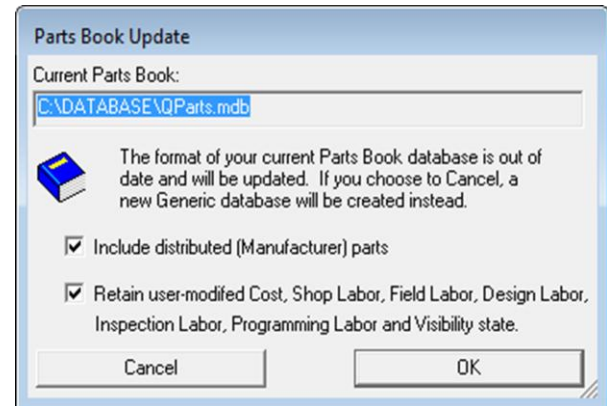

Do Not Update your AlarmCAD Part Book unless you know the correct settings to use. Legacy and Non-Distributed databases are typically named: Update22.mdb, Update35.mdb, MyParts.mdb, etc.

